

★★★ Difficulty level ★ easy ★★ moderate ★★★ challenging

Weekend DIY with Mark Rayner – 73

You will need:

- Bucket
- Concrete wall (ours was previously painted)
- Garden hose with clean running water
- Garden sprayer
- Paintbrush
- Paint stirrer
- Resene Moss & Mould Killer
- Resene Paint Prep and Housewash
- Resene Lumbersider tinted to Resene Reverie
- Rubber gloves
- Stiff-bristled brush




Step 1
Mix one part Resene Moss & Mould Killer to five parts clean water in the garden sprayer.



Step 2
Spray the concrete wall with the solution and leave for 48 hours.



Step 3
Mix in a bucket one part Resene Paint Prep and Housewash to three parts water.

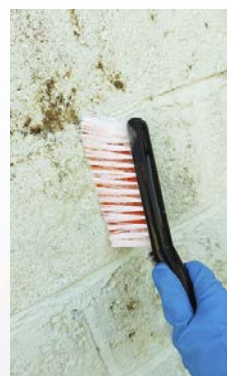

Step 4
Scrub the concrete wall thoroughly with the solution using a stiff-bristled brush.



Step 5
Rinse well with clean water and allow the concrete wall to dry.



Step 6
Carefully stir the Resene Lumbersider tinted to Resene Reverie.



Step 7
Apply one coat of Resene Lumbersider tinted to Resene Reverie to the concrete wall and allow to dry.



Step 8
Apply a second coat of Resene Lumbersider tinted to Resene Reverie to the concrete wall and allow to dry.

To get the look:
Mark painted the trellis with Resene Lumbersider tinted to Resene Alabaster and the chair with Resene Super Gloss tinted to Resene Adrenalin.



Other ideas:
For a bright pink effect paint the concrete wall with Resene Lumbersider tinted to Resene Cabaret.

For more ideas and inspiration visit your local Resene ColorShop or www.resene.com/colorshops.

Check out more project ideas online www.resene.com/projects.