



★★★ Difficulty level ★ easy ★★ moderate ★★★ challenging


Room for Improvement
with Mark Rayner – 3

| | |
|------------------|---|
| Room | Shed interior |
| Condition | Poor |
| Ceiling | Fixed battening with corrugated iron over builder paper |
| Walls | Bare timber with moderate water staining |
| Floor | Rotted particleboard |

You will need:


- 7mm plywood panels cut to fit between ceiling rafters
- 50mm galvanised nails
- 75mm decking nails
- 20mm screws
- 25mm x 50mm battening cut to fit around edges of floor
- 2.4m fence palings
- Clean cloth
- Hammer
- Paintbrushes
- Paint roller and tray
- Pencil
- Resene dropcloth
- Resene Quick Dry
- Resene SpaceCote Flat tinted to Resene Alabaster
- Resene SpaceCote Flat tinted to Resene Half Dutch White
- Resene Thinner No.2
- Resene Walk-on flooring and paving paint tinted to Resene Flax
- Resene Wood Primer
- Rubber gloves
- Saw
- Screwdriver
- Stiff-bristled brush
- Tape measure

Transform a dark shed into a light and bright space with a little bit of help from Resene.

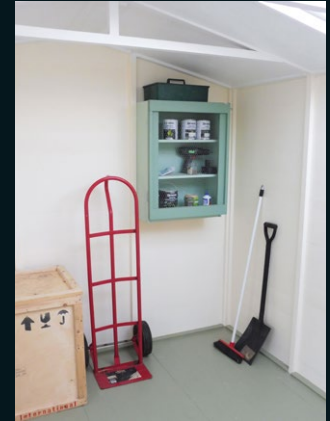

To get the look:

Mark previously painted the wall cupboard with Resene Lustacryl tinted to Resene Gum Leaf and Resene Cascade.

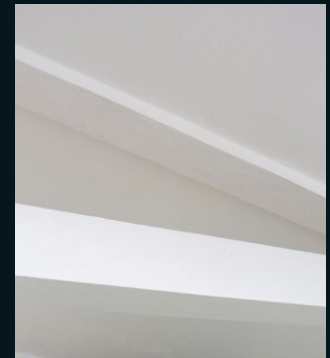

Other ideas:

Instead of painting the floor, it could also have been stained with Resene Colorwood interior wood stain and finished with Resene Cristal ClearFloor.




Step one
Remove rotten flooring and any old nails or screws.



Step two
Brush down and clean all woodwork to remove any dust and dirt.




Step three
Lay the fence palings across floor joists, as shown, fixing with decking nails and cutting where necessary. Continue until the floor is complete. Fix pieces of battening around the outer edges of the floor using 50mm nails.

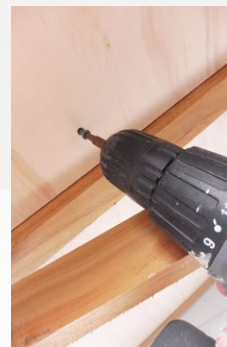

Step four
Attach the plywood panels to the ceiling battens with screws.

Steps 5-16 overleaf >

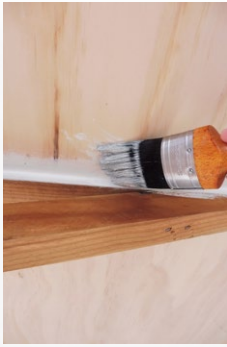

Step five

Apply one coat of Resene Quick Dry to the edges of the ceiling and rafters using a brush.



Step six

Apply one coat of Resene Quick Dry to the ceiling panels with a roller. Allow to dry.




Step seven

Apply one coat of Resene Wood Primer to the shed walls and door and allow to dry. Wash brush in mineral turps.



Step eight

If painting under marginal conditions oil based primers can cure with an oily surface layer, which can cause cissing of waterborne topcoats. If this occurs, wipe the primer surface with Resene Thinner No.2.

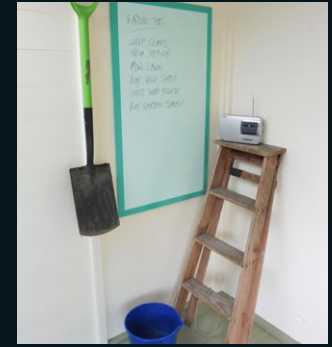

Handy hints:

Always ensure paints and primers are stirred well immediately before using.

If necessary, treat any areas of mould with Resene Moss & Mould Killer. For any old stained or natural timber wash with a solution of Resene Timber and Deck Wash to provide a clean surface ready for painting.



Step nine

Apply one coat of Resene Alabaster to the edges of the ceiling and rafters using a brush.




Step ten

Apply one coat of Resene Alabaster to the ceiling panels with a roller. Once dry, apply a second coat of Resene Alabaster to the rafters and ceiling and allow to dry.



Step eleven

Cut in around the wall and door edges and corners with Resene Half Dutch White.

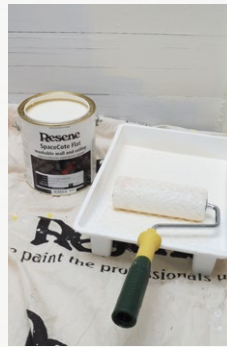

Step twelve

Paint the walls and door with Resene Half Dutch White using a roller and allow to dry. Apply a second coat of Resene Dutch White to the walls and door and allow to dry.



Top tip:

Rough sawn timber makes for very cost effective shed flooring but is prone to potential splinters. We recommend painting or staining it. If it is particularly rough it may need sanding first to remove splinters.



Step thirteen

Cut in around the edges of the floor with Resene Quick Dry.



Step fourteen

Apply one coat of Resene Quick Dry to the floor using a roller and allow to dry.



Step fifteen

Cut in around the edges of the floor with Resene Flax.



Step sixteen

Apply one coat of Resene Flax to the floor using a roller and allow to dry. Apply a second coat of Resene Flax to the floor and allow to dry.